



User Manual IS0104 使用説明書

# ITSU 神手の物

User Manual
All information is correct at the time of print

### CONTENTS

Safety Instructions	03
Warranty Claims	05
Main Unit & Accessories	06
Product Operation Guide	07
Product Maintenance	09
Troubleshooting	10
Contact us	11

### Safety Instructions

### i. Usage environment

- Do not use the appliance in a wet condition or dusty environment as this may result in malfunction or electric shock.
- Place the appliance in a safe location.
- Do not expose the appliance to a heater or direct sunlight.
- This product is only intended for personal use only. Commercial use is prohibited.

#### ii. Health precautions

If you are experiencing health complications or conditions as stated below, please consult your doctor before use:

- Suffering from heart disease.
- Pregnancy.
- Any health concerns.

#### iii. When the product should not be used

- If the use exceeds 15 minutes at one time.
- This unit should not be used by children or invalids without adult supervision.
- · Before sleeping.
- If the fabric cover is torn.
- If water is accidentally spilled onto the appliance.
- If the user feels abnormal or severe pain during the massage.
- If the user detects any malfunction or other abnormal conditions during operation.
- · If there is lightning.

#### iv. Caution and warning

- Unplug the appliance from the outlet when not in use.
- Do not use any attachments that are not recommended by ITSU.
- Do not operate this appliance if it has a damaged cord or plug. Please return the unit to ITSU. Service Center for examination and repairs.
- Do not insert your hands or any foreign matters into the massager's vents and gaps.
- Handle heated surfaces carefully. The unattended use of the heated surfaces by children or invalids may be dangerous.
- This product is only intended for personal use only. Commercial use is prohibited.

### Safety Instructions

- Do not cover the appliance during operation. As this may result in malfunction or fire.
- Do not crush the appliance and avoid any sharp folds.
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

#### V. Note

- This appliance can be used by children at the age of 8 or above and persons
  with reduced physical, sensory or mental capabilities or lack of experience and
  knowledge under guidance or if they have been informed of the risks involved
  and instructions concerning use of the appliance in a safe way.
- Children shall not play on the appliance.
- Cleaning and maintenance shall not be performed by children without supervision.
- To ensure safe and proper use of the appliance, do not operate it before reading this user manual carefully first.
- It is normal to hear the noises during use, because they are resulted from vibration of product.
- For people under medication or with a medical condition, please consult your doctor before use. Please do not use the product if you are not feeling well.
- If the appliance is used in a cold room, do not increase the room temperature abruptly. It is advised that the temperature is gradually increased to a normal level.
- If the appliance is stored in a cold place and being taken into a warm environment,
   please wait one hour before use to get the optimum massaging level.
- Do not remove the cover of the appliance. Mishandling the internal components may result in malfunction or electric shock.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands,
- Do not use the appliance if the electrical outlet is loose.
- The appliance is only to be used with power supply provided.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.


### Warranty Claims

- 1. Warranty is not transferable.
- 2. This warranty is effective only if the product is purchased from ITSU.
- 3. Proof of purchase (original receipt) is required for all warranty repairs.
- 4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
- 5. Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
- 6. Warranty does not cover accessories and attachments which do not belong to the massage unit.
- 7. Warranty is not effective to rental, business, commercial, institutional or other non-residential users.
- 8. All services covered by this warranty must be approved by ITSU and repaired by authorized technicians only.
- 9. If replacement parts for defective materials are not available, ITSU reserves the right to make substitution in lieu of repair or replacement.

### Main Unit & Accessories

- A) Massager
- B) Power adapter

## Controller Diagram

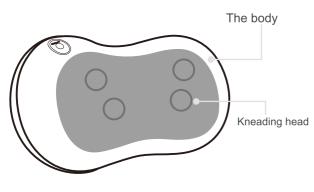

6



Power adapter

## **Product Operation Guide**

### i. Product features

- Multi-function massager that can be used on every part of the body, especially on the neck, the shoulder, the waist.
- 4 smooth massager heads that can be automatically inverted to knead and relax muscles.
- Physical therapy function and massager stimulation to soothe multiple aches and provide a more thorough massage convenient use with just one button.
- Light and handy, portable.
- After using for 15 minutes, the power will automatically end.
- The ergonomic design allows the product tobe used in different occasions and places.

### ii. Operation instruction

The waist

The leg

The shoulder and neck







#### a) Preparation before use

- Check if there is any damage to the appliance.
- Place the appliance on the part which needs to massaged, before ensuring that the appliance is properly placed.

### b) Usage method

- 1. Connect the DC head of the power adapter to the DC connector of the appliance, and plug the other side into the power base.
- 2. Charge for 2.5 hours can be used for 2 hours continuously.
- 3. Battery charging indicator:

Charging: red light illuminate

Fully Charged: green light illuminate

4. Operation method

Press and hold the POWER button for 2 seconds to start massage with heat.

Press POWER button again to change massage direction

Press POWER button again to turn off heat function

Press POWER button again to turn off the product.

- \* The massage direction changes automatically every one minute.
- \* The massager turns off automatically after 15 minutes use.

### **Product Maintenance**

#### TO STORE

- Place the massager in this box or in a safe, dry and cool place. Avoid contact with sharp edges or pointed objects that might cut or puncture the surface.
- Please wind up and store the power cord under the appliance bottom frame. Do not hang the unit by the power cord.

#### TO CLEAN

- Avoid immersing the unit in any liquid during cleaning.
- Unplug the unit and allow it to cool before cleaning.
- Clean only with a soft, slightly damp sponge.
- Do not allow water or any other liquid to go inside the unit.
- Avoid using abrasive cleaners, brushes, gasoline, kerosene, glass/ furniture polish or paint thinner to clean the product.
- Do not attempt to repair the product. For servicing, please contact ITSU.

#### CAUTION

- Avoid tearing on the appliance surface.
- Only gentle force should be exerted against the unit in order to eliminate any risk of injury.
- Beware when put on light color PU/fabric seat, some material may have color dyeing
- Beware when put printing document on product, some material may have color dyeing

# Troubleshooting

This massager is controlled by an integrated chip and is susceptible to power surges from +10% to -15%. Due to this, the massager might display the following:

Conditions	Possible reason	Solutions
The appliance	1. The appliance is out of power	Please charge the product
cannot be	2. Do not start the ON/OFF	2. Start the ON/OFF button.
opened.	button.	
The appliance	1. The appliance is out of power	Please charge the product
suddenly	2. The total operating time is	2. Re-start the ON/OFF button.
shuts down all	over 15 minutes.	3. After the appliance has
functions.	3. The appliance has been used	cooled down, re-start the ON/
	for a long time, resulting in	OFF button.
	over-heating.	4. Re-start ON/OFF button.
	4. Due to too much force	
	applied, the massager head is	
	stalled.	

## **Product Specifications**

Model number of the product	IS0104
Power source	100-240V
Power frequency	50/60Hz
Power consumption	24W
Voltage	12VDC,1A
Timer	15 minutes
Dimension (Length/width/height)	L355 x W110 x H180(mm)
Weight	1.6kg

10

### **Contact Us**



ITSU World Sdn Bhd 13 Lorong Teknologi B. Nouvelle Industry Park. Taman Sains SG1 Kota Damansara. PJU 5. 47810 Petaling Jaya Malaysia

Tel: +603 78903366



ITSU World(HK) Limited
Workshop D1,28/F. TML Tower
No. 3 Hoi Shing Road, Tsuen Wan, N.T.

11

Tel: +852 3611 2228



PT Healthy World Lodan Center Block O No 20 Jalan Lodan Raya No 2 Jakarta Utara 14430

Tel: +62 21-6983 1123

### 目録

安全説明	13
保修權限	15
主要部件及附件	16
産品操作説明	17
産品保養	19
疑難解答	20
産品規格	20
聯絡我們	21

### 安全説明

### i. 使用環境

- 請勿在潮濕或灰塵密集的環境下使用本産品,以免導致觸電或機器故障。
- 請將本産品存放在安全的地方。
- 請勿將此産品暴露于熱源或陽光直射下。
- 本産品僅爲個人使用,禁止用于商業用途。

### ii. 健康注意事項

以下人士,請在使用前先咨詢醫生的意見:

- 心髒病患者
- 懷孕
- 有任何健康問題

### iii. 以下情况請勿使用本産品

- 當一次使用本産品超過 15 分鐘時。
- 小孩或殘病人士在無人監督的情况下。
- 睡前。
- 産品外層破損。
- 液體潑濺到產品上。
- 使用過程中感到不尋常或劇烈疼痛。
- 使用過程中發覺任何機件故障或不正常狀况。
- 打雷時。

#### iv. 警告

- 没有使用時,請拔下電源插頭。
- 請勿使用非 ISTU 提供的配件。
- 當電源綫或插頭損壞時,請勿使用并及時聯系 ITSU 服務中心進行維修檢查。

### 安全説明

- 請勿將手或任何异物寒入按摩器間隙中。
- 請務必謹慎使用按摩器的導熱功能,勿用于對熱能反應較爲遲鈍的皮膚上及血 液循環不良的部位。請勿讓兒童或身心功能障礙者自行使用導熱功能。
- 本産品僅爲個人使用,禁止用于商業用途。
- 請勿扯動電源綫來移動本産品。
- 請勿在使用中覆蓋本産品,以免引起故障或火灾。
- 請勿擠壓或用尖鋭物刮破本産品。
- 該設備具有加熱表面。對熱不敏感的人必須小心使用。

#### v. 注意

- 8歲及大于該年齡的兒童,肢體不健全、感官或者精神上有障礙或缺乏相關知 識經驗的人必須在被告知相關風險以及正確使用方法,并在有人指導并監督的 情况下使用該産品。
- 兒童不能在產品上玩耍。
- 兒童必須在有監管的條件下才能對產品進行清潔和維護。
- 爲確保安全及正確使用,使用前請務必詳細參閱本説明書。
- 使用時發出的聲響屬正常,這是由產品振動而產生的。
- 正在接受藥物或醫療治療者,請在使用前咨詢醫師。若您感覺不適,請勿使用本産品。
- 如果在低温室中使用,請勿驟然升高温度。建議將温度逐漸升高調整到正常温度后使用。
- 若將產品從低温或高温的環境中,建議您在一小時后再進行使用本產品, 以達到最佳的按摩體驗。
- 請勿拆卸本産品。觸碰內部機件可能導致故障或觸電意外。
- 請勿用潮濕的手安插或拔出電源插頭。
- 當電源插座有松動時,請勿使用。
- 避免兒童在産品上玩耍。

### 保修權限

- 1.本保修權限不可轉讓。
- 2. 本保修服務僅對在 ITSU 購買的產品有效。
- 3. 當要求保修服務時,請出示購買證明(正本收據)。
- 4. 所有保修項目,包括但不限于這些健身及適銷性的保修項目有效期限需視保修政策 而定。
- 5. 因錯誤使用、處理不當以及未經授權私自改裝和維修產品而導致的損壞,不屬于保 修範圍。
- 6. 此保修範圍不包括不屬干產品本身的附件。
- 7. 此保修範圍不適用于租憑、交易、商業、機構或其他非住宅用户。
- 8. 此保修範圍內所涉及的維修服務需經過 ITSU 授權,且必須由授權的技術人員維修。
- 9. 若需更换的維修附件缺貨,ITSU 有權采用替代配件進行維修。

# 主要部件及附件

- A) 按摩器
- B) 電源適配器



電源適配器

産品操作説明

### i. 産品特性

- 多用途按摩器,適用于身體各部位,特别是頸部、肩部及腰部。
- 4個平滑按摩頭自動正反轉,并放松肌肉。
- 温熱理療功能,多重舒緩酸痛,按摩更深入。使用方便,一個按鈕提供 簡易操作。
- 輕巧且携帶方便。
- 使用 15 分鐘后, 電源自動關閉。
- 人體工學曲綫設計,兼顧多場合多部位使用,按摩更隨心

### ii. 操作説明

腰部

腿部

頸肩部







#### a) 使用前准備

- 檢查産品有無破損。
- 將產品置放干想要按摩的身體部位,并且確定擺放位置適當。

### b)使用方法

- 1. 將電源適配器的 DC 頭接入產品的 DC 綫接口,另一端插入電源插座上
- 3. 充電器充電時,紅色LED點亮;充滿,緑色LED亮起。

#### 4. 操作方法

- 長按 ON/OFF 開關按鈕2秒開機,開啓按摩及加熱功能,此時按摩球轉動,一分鐘自動正反;
- 第二次短按 ON/OFF 開關按鈕,换向;
- 第三次短按 ON/OFF 開關按鈕, 關閉加熱;
- 第四次短按 ON/OFF 開關按鈕, 關機;
- 定時15分鐘。
- 手動换向后,自動换向仍然存在。

### 産品保養

#### 貯藏

- 請將置放于原盒内或者安全、干爽通風的地方,避免以尖狀物刮破加熱按摩器的表面。
- 請將電源綫纏繞在產品底部的固定架下,以便儲藏。切勿使用電綫懸挂加熱按摩器。

#### 清潔

- 切勿將加熱按摩器浸干任何溶液中清洗。
- 清潔前切記關掉電源并先冷却。
- 清潔時只須用柔軟微濕的海綿抹拭即可。
- 避免水或其它液體進入加熱按摩器。
- 切勿用清潔劑、刷子、汽油、煤油、玻璃清潔劑或者稀釋劑清洗。
- 切勿自行維修本産品,如需維修服務,請與 ITSU 售后服務中心聯系。

#### 提示

- 避免加熱按摩墊外套破損。
- 使用過程中,避免過度用力以免受傷。
- 小心當放在淺色PU/織物座椅上時,一些材料可能會染色。
- 小心當印刷材料放在產品上,一些材料可能會染色。

## 疑難解答

此產品由集成芯片控制,對電壓波較爲敏感。如果電壓波動超過限定電壓 +10% 或 -15%,按摩器可能出現以下情况:

异常情况	可能原因	解决办法
無法開機。	1. 電池没電。 2. 開/關按鈕未開啓。	1. 插入電源進行充電 2. 開啓開/關按鈕。
突然停止操作。	<ol> <li>電池没電。</li> <li>按摩時間超過 15 分鐘。</li> <li>連續使用時間過長,產品過熱保護。</li> <li>施力過大,按摩球堵轉。</li> </ol>	1. 進行充電 2. 重新開啓開/關按鈕。 3. 産品冷却后,重新開啓開/關 按鈕。 4. 重新啓動開/關按鈕。

# 産品規格

産品型號	IS0104
電壓	100-240 伏特
電頻	50/60 赫
功率	24 瓦特
電壓	12 伏直流電,1安
定時	15 分鐘
尺寸(長×寬×高)	長 355 x 寬 110 x 高 180(毫米)
重量	1.6 公斤

### 联络我们



ITSU World Sdn Bhd 13 Lorong Teknologi B. Nouvelle Industry Park. Taman Sains SG1 Kota Damansara. PJU 5. 47810 Petaling Jaya Malaysia

Tel: +603 78903366



ITSU World(HK) Limited
Workshop D1,28/F. TML Tower
No. 3 Hoi Shing Road, Tsuen Wan, N.T.

Tel: +852 3611 2228



PT Healthy World Lodan Center Block O No 20 Jalan Lodan Raya No 2 Jakarta Utara 14430

Tel: +62 21-6983 1123